


Top Hat Roof Penetration Kit

For use with air conditioning units, heat pumps and solar panels

Top Hat Roof Kit

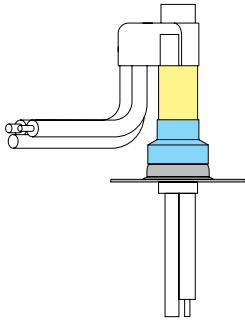

Compliant Penetration



CODE

RF PN 50

SIZE (MM)

50

RF PN 65

65

RF PN 65 Twin

65 Twin

RFPN80SC

80


RFPN110FC

110




For other options on solar penetrations refer to Dektite premium solar products on page 4.

Installation Instructions:



Position the PVC tube. Fix it to a batten or rafter.




Fit the Dektite flexible flashing as per the installation instructions.



Slide the PVC cover flashing into position and glue/


Twin 65 Cap



Install all pipe work and secure the cap with stainless steel self tapping screws.




For more effective drainage always fit the Dektite on the diamond as shown.

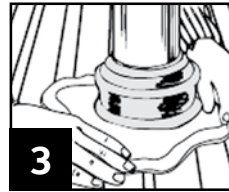


Slide the PVC cover flashing into position and glue/


Press base to the roof profile by hand, smooth out any awkward creases. Don't fully extend to allow for vibration.

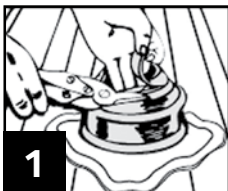


Cut a neat hole in the roofing sheet with minimum clearance for pipe and insert pipe through hole. Trim the cone to suit pipe size using sharp tin snips (where necessary, support cut sections of sheet with additional timber framing).

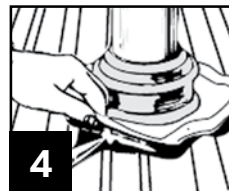

Apply a neutral cure 100% silicone sealant (roof and gutter approved) by turning back the flexible flange.

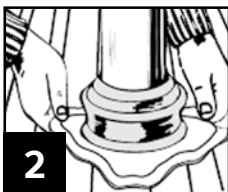

Slide Dektite flashing down over pipe. Lubricating the pipe with water allows the pipe to slide snugly into position.

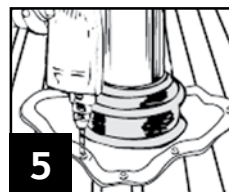

Fasten using class 4 coating washered screws. Fit fasteners progressively outward in opposing pairs.