



Dektite®


INSTALLATION INSTRUCTIONS

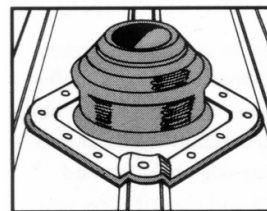


For more effective drainage always fit the Dektite on the Diamond or bias.

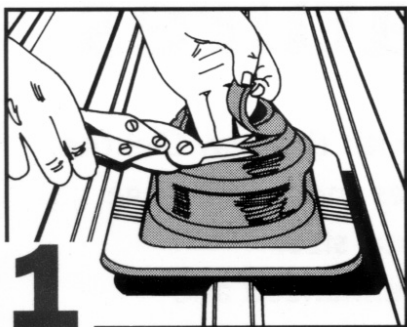


1 Cut a neat hole in roofing sheet with minimum clearance for pipe and insert pipe through hole. Trim the cone to suit pipe size using sharp tin snips. Where necessary, support cut sections of sheet with additional roof framing

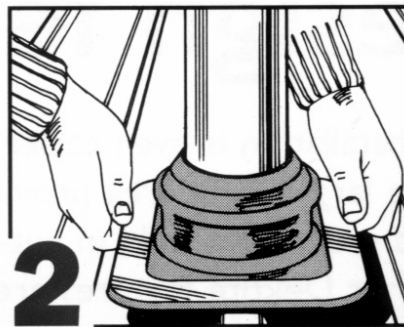


2 Slide Dektite® flashing down over pipe. Lubricating the pipe with water allows the pipe to slide snugly into position.

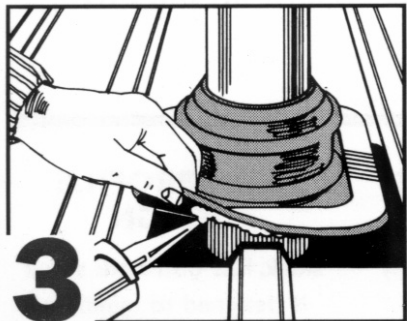


3 Apply a neutral cure silicone* sealant by turning back the flexible flange.

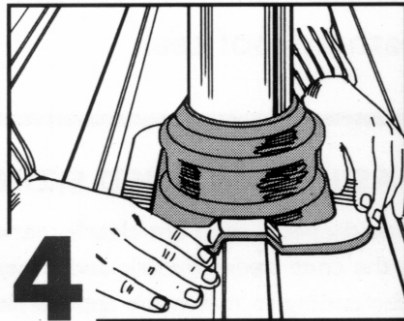

4 Press base to the roof profile by hand, smooth out any awkward creases. Don't fully extend to allow for vibration.

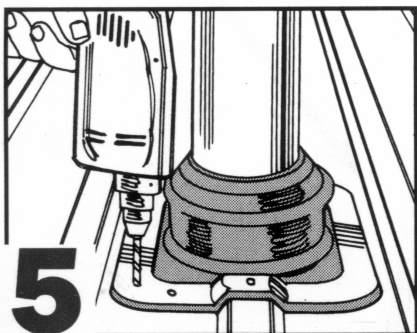

5 Fasten using sealed rivets or washered screws. Fit fasteners progressively outward in opposing pairs to avoid gaps.

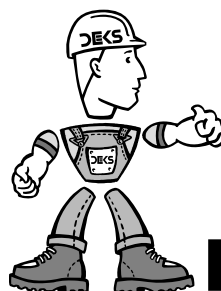

Dektite®
First and the Best!

HINT: When flashing a metal flue that has an exposed seam, using a neutral cure sealant, seal the seam from underside of cowl to the top of Dektite® cone.